



1. Determine Base Width

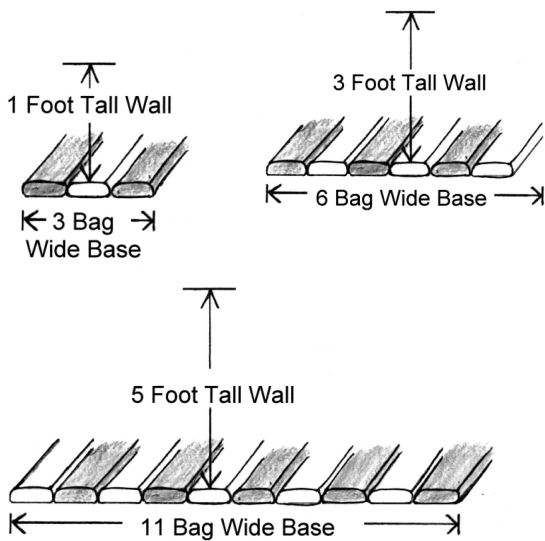


2. Layout Base Rows

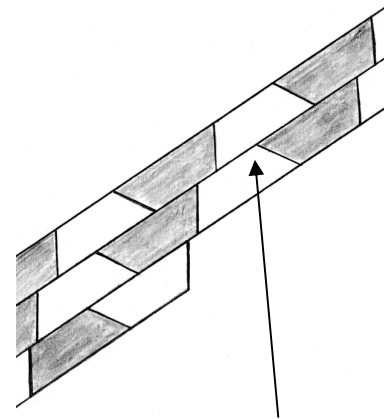


Stagger Seams Between Rows

3. Stack as Pyramid

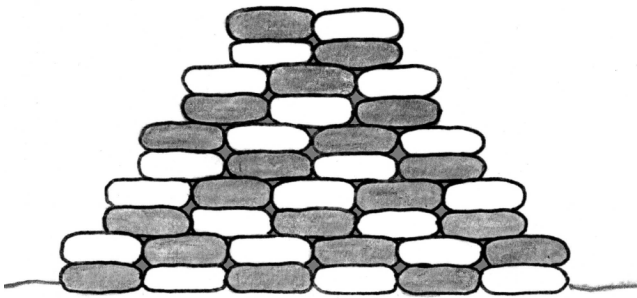

Example of a 3 foot tall wall.

4. Options

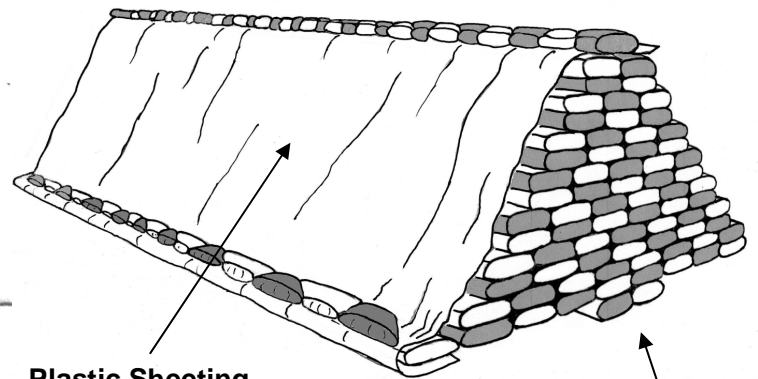

Plastic Sheeting
on Water Side

Locking Trench with
Two Rows of Bags

Important Tips

- If bags are tied for transport, UNTIE them before using.
- Tightly packed walls work, loose walls don't.
- Don't over fill bags. Too much sand makes the bags round and wobbly.
- Fully fold the top of the bag under.